


Installation Guidelines

Edge Grip Standoffs (105.025, 105.015)




Installation Tips

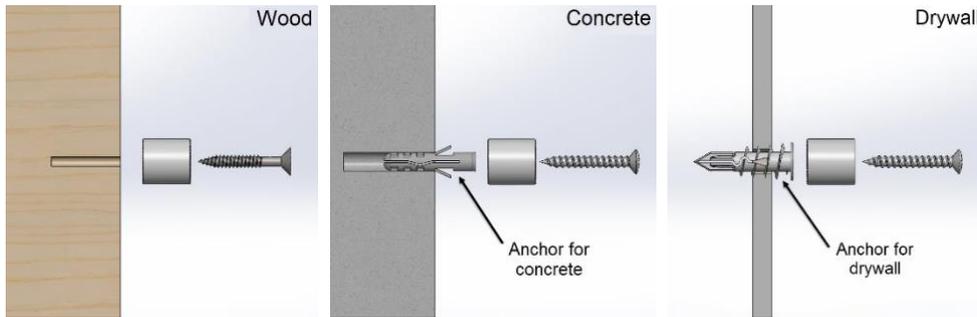


Always check the installation surface to ensure that the substrate will be strong enough to hold the weight of the panel. All installation must be done so with proper hardware and protective gears to ensure safety. It is important to check that parts are properly tightened at the end of each installation.



1 Using the edges of the panel as a template, mark along the outside edges where you would like edge grips mounted (marking the grips location on the panel is recommended).

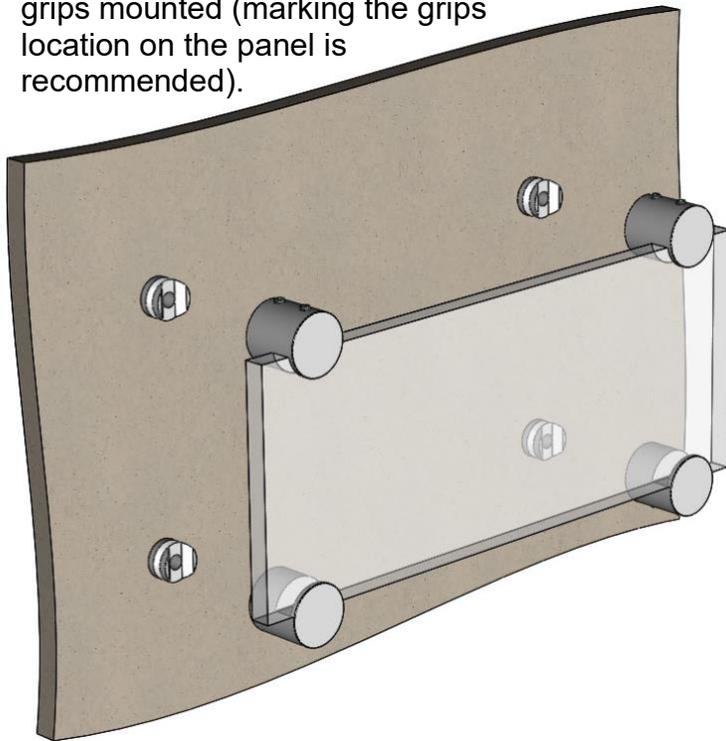

2 Install the edge grip support found on bottom of edge grip to the wall using mounting hardware.

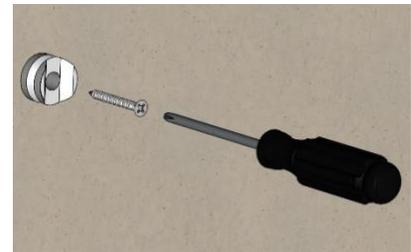

3 Install edge grips on the supports, tighten the M4 set screw closest to the wall.

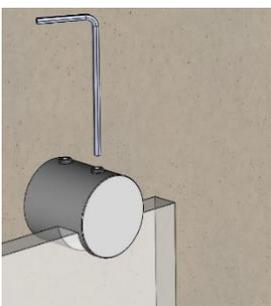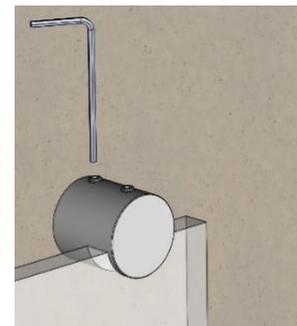

4 Slide the panel all the way through the edge grips and tighten the M4 set screw on the outside of the edge grip farthest from the wall to secure the panel to the edge grip.

Ensure it is a snug fit but it does need to be overtightened.