
Installation Guidelines Screw Cover

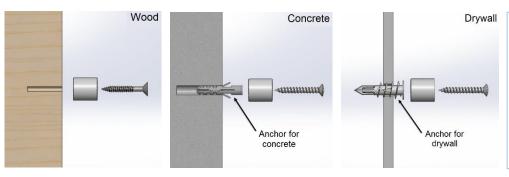

Installation Tips




Always check the installation surface to ensure that the substrate will be strong enough to hold the weight of the panel. All installation must be done so with proper hardware and protective gears to ensure safety. It is important to check that parts are properly tightened at the end of each installation.

1 Pre-drill 1/4" holes in your surface, then insert nylon anchors into the holes.

2 Using the included tool, drive your hanger screws into the nylon anchors, then tighten barrels to surface.

3 Screw threaded studs into your barrels, then place your panel in position and thread on caps until snug.

4 Screw threaded studs into your barrels, then place your panel in position and thread on caps until snug.

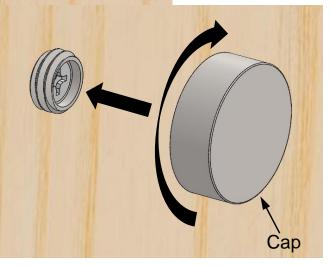

Address: Htm-Mbs 6420 Benjamin Rd, Tampa, FL. 33634



Phone : 1-813-938-6025 Fax : 1-813-425-9007 Mail: sales@mbs-standoffs

2 Using the source of the sour