


Installation Guidelines


Aluminum Color Standoffs



Installation Tips

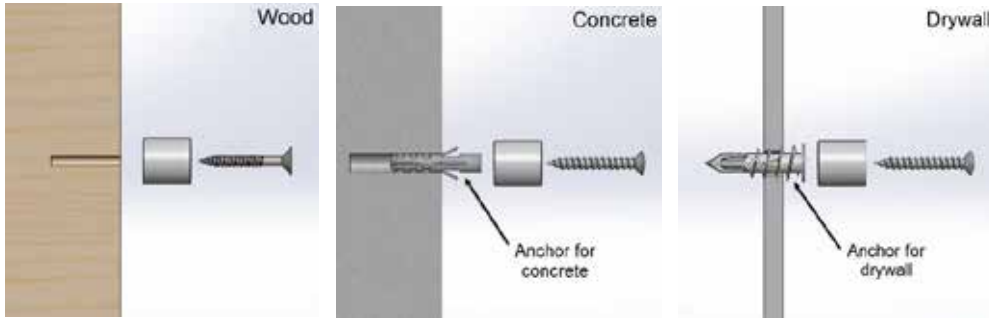


Always check the installation surface to ensure that to hold the weight of the panel. All installation must be done so with proper hardware and protective gears to ensure safety. It is important to check that parts are properly tightened at the end of each installation.

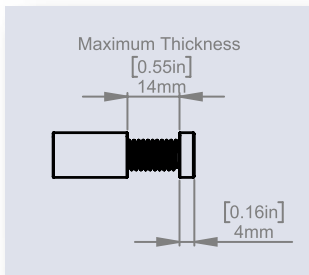

1. use the holes in your material as a template to mark holes on your mounting surface.

2. Pre-drill 1/4" holes in your surface

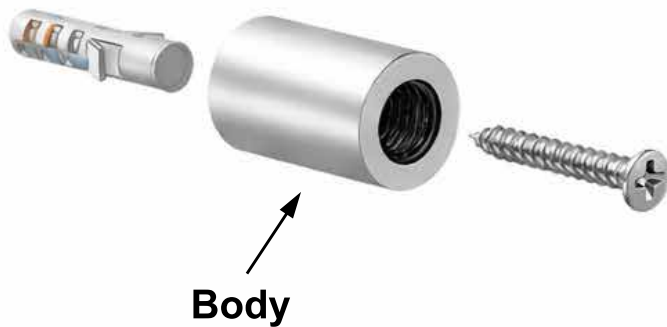

3. Using the included tool, drive your hanger screws, then tighten barrels to surface.

4. Screw threaded studs into your barrels, then place your panel in position and thread on caps until snug.

